

## 5. SD Card Formatting

Formats the internal SD card in BEKS Automat

**\* Note! This function deletes all designs in memory, network settings, hoop files, and Operating system.**

✧ Refer to “Chapter 11, 20. Software Version” about checking the version.

1) The following 2 files are required for formatting the SD card.

- ks\_format.kss (format file)
- NK.KSC or NK.KSS (Operation system)

Save the format file and operation system file in the root of a USB Flash Drive.


2) Turn the power **OFF** at the Automat.

3) Insert the USB Flash Drive that contains the format files.


4) Press and hold the **Origin key** and then Power **On**.

5) Keep holding the Origin key until you hear an intermittent beeping sound.

6) Afterwards the System Update screen is displayed :

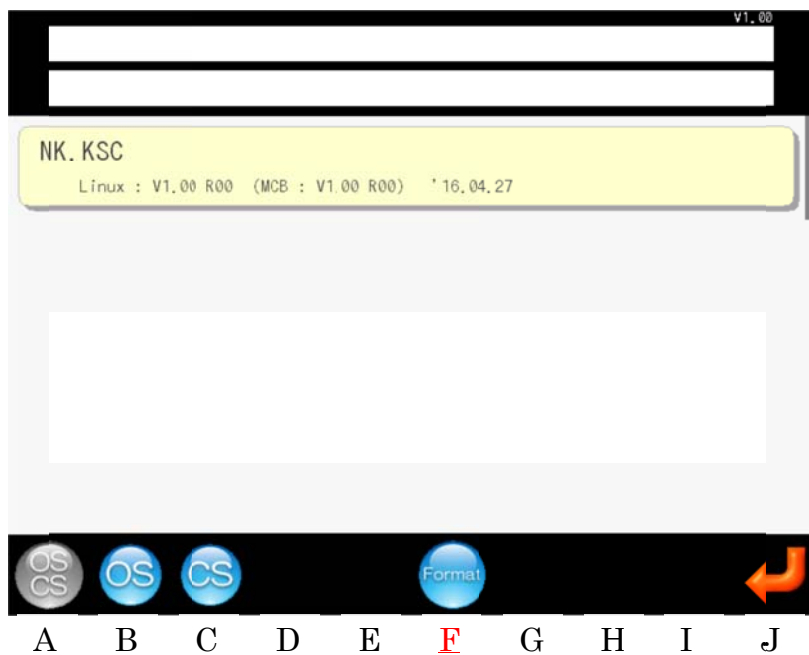

7) Press and hold the **FORMAT**  Icon above “F” to start the formatting.  
 A constant beeping sound will occur to indicate the SD card is being formatted.

✧ The **FORMAT**  Icon will be grayed out and non-active, if the (ks\_format.kss) format file is not present on the USB Flash drive.

8) After the formatting is complete, a final long beep will occur.

9) Afterwards, update the operation system software.

Refer to “1. System File Structure” and “2. System Software Update”.

1章
2章
3章
4章
5章
6章
7章
8章
9章
10章
11章
12章
13章