

Barudan

Elite XL II or Pro II Uncrate Procedures:

- Remove top and front of the crate using a 10mm socket wrench and a pry bar. (Power drill or pneumatic drill is helpful)
- Remove the silver packing carefully not to cut into the equipment.
- Remove any components off of the skid (boxes, etc.).
- Once machine is exposed remove the straps and taped cardboard holding the machine to the skid and holding blocks.
- Attach wheels and leveling feet to cart and lift machine onto the cart; lifting under the machine base (blue section in diagram below).

