[2-4] Attaching the Thread Stand

① Place the thread stand assembly on the top of the machine and attach with (5) M4x6 truss head screws in the red circled areas shown below.



② Mount the thread guide base assembly to the tension base and attach with (4) M3x8 cap bolts in the following red circled areas shown below.

