


CAP FRAME MOUNTING INSTRUCTIONS FOR BEVT-S901CAII

Note: The cap frame assy comes with additional hardware for older models. The BEVT-S901CAII uses EFP008300 adapter bracket which incl. 2- M5x12 screws & 2- 1/4-20 Knob bolts. See pic inset in **red** below.



Remove hoop sash from machine.

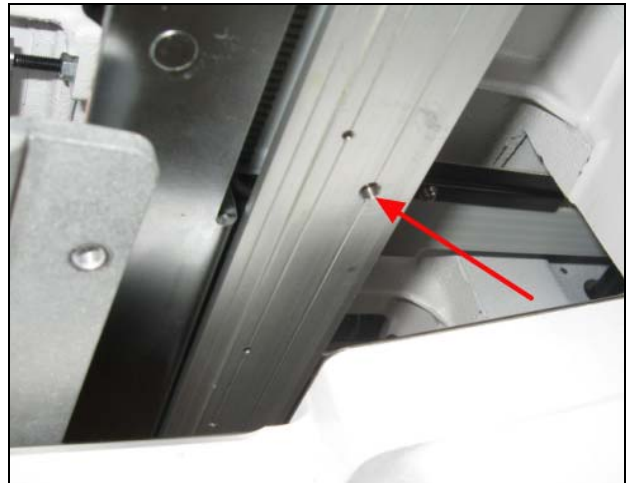


Looking under pantograph, locate 2- M5 tapped holes. (one on each side of cylinder bed)




Install **adapter bracket** using 2-M5x12 Button head screws and tighten. (bracket will remain on machine)



Loosely install 2- 1/4-20 Knob bolts

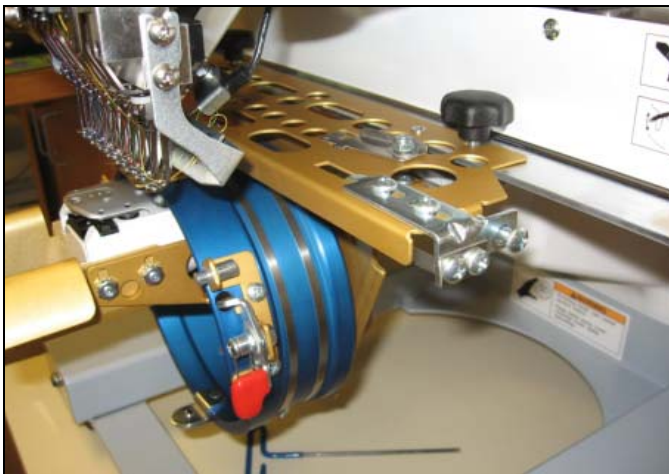

Install cap drive unit as shown.

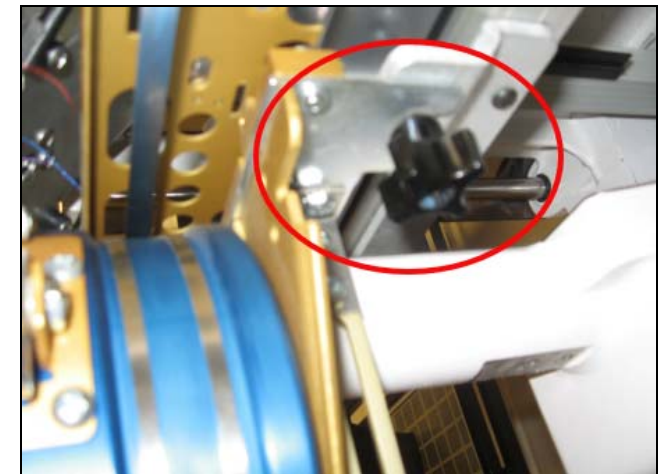

Make sure slotted tabs are seated against knob bolts circled. Tighten, then check pantograph movement front to rear.

CAUTION: REMOVE KNOBS WHEN CAP FRAME NOT IN USE. KNOBS MAY HIT BACK OF SEWING HEAD WHEN PANTOGRAPH MOVES TO REAR.